



Canon EOS Rebel XSi LCD Screen Replacement

Use this guide to replace a broken or faulty LCD screen.

Written By: Erik Mork



INTRODUCTION

This replacement guide shows how to remove the camera's LCD screen. The back panel must be removed before hand.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- Squeeze the eyepiece between your index finger and thumb and lift up and off

Step 2



- Using the PH000 screwdriver head, remove the four 4 mm screws on the bottom of the camera

Step 3




- On the right side of the camera (from the LCD screen), use the PH000 screwdriver head to remove the two 3mm screws

Step 4



- Remove grip by slowly peeling off

Step 5

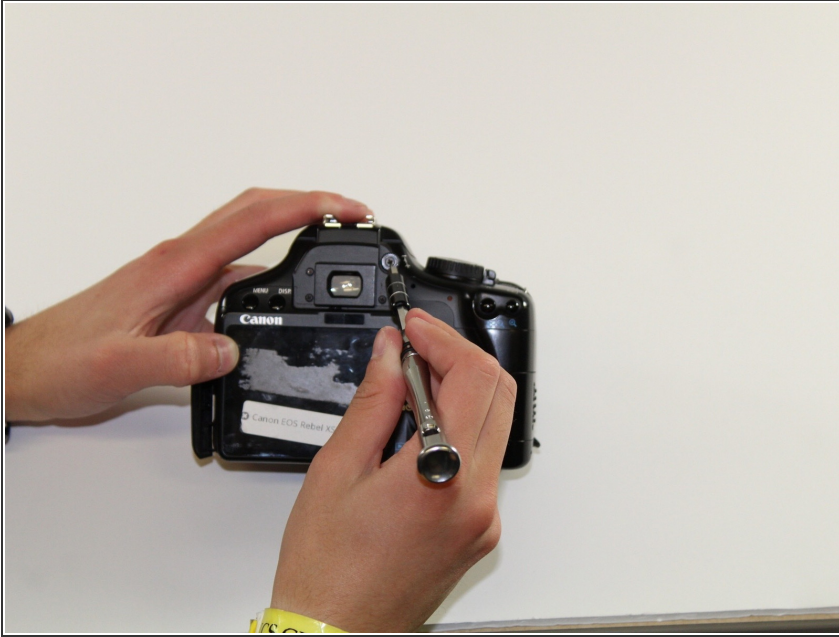

- Using the PH000 screwdriver, remove the four 4mm screws behind the eyepiece

Step 6




- On the left side of the camera (from the LCD screen), use the PH000 screwdriver head to remove one 4 mm screw

Step 7




- Remove side panel by lifting off with fingers

Step 8

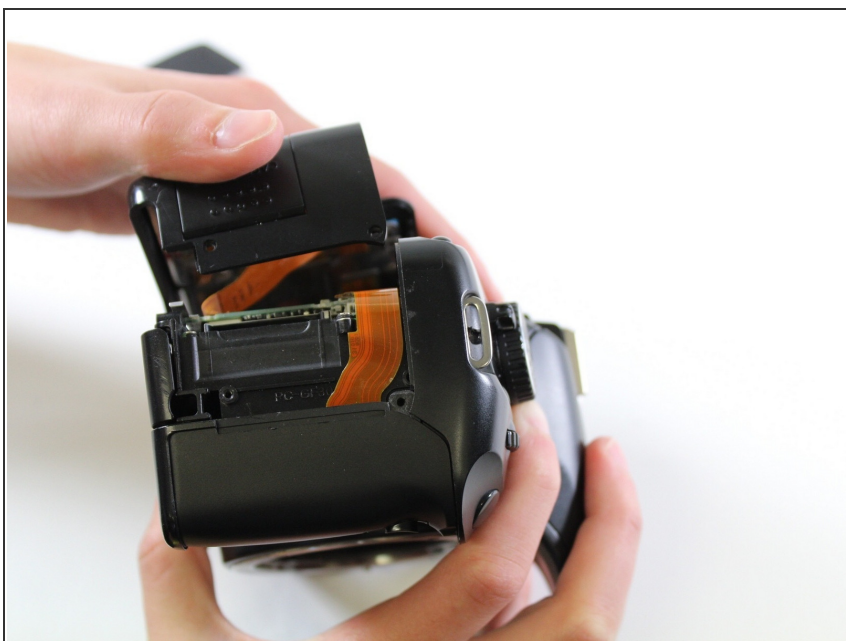



- Use hands to pry off the back panel

Step 9 — LCD Screen

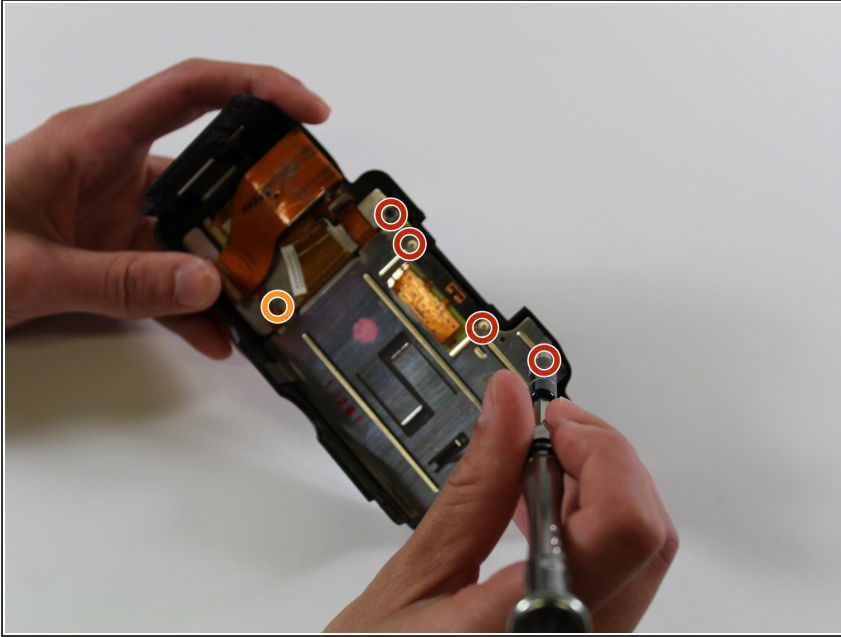


- Using the PH00 screwdriver head, unscrew four 4 mm screws and one 2 mm screw

Step 10

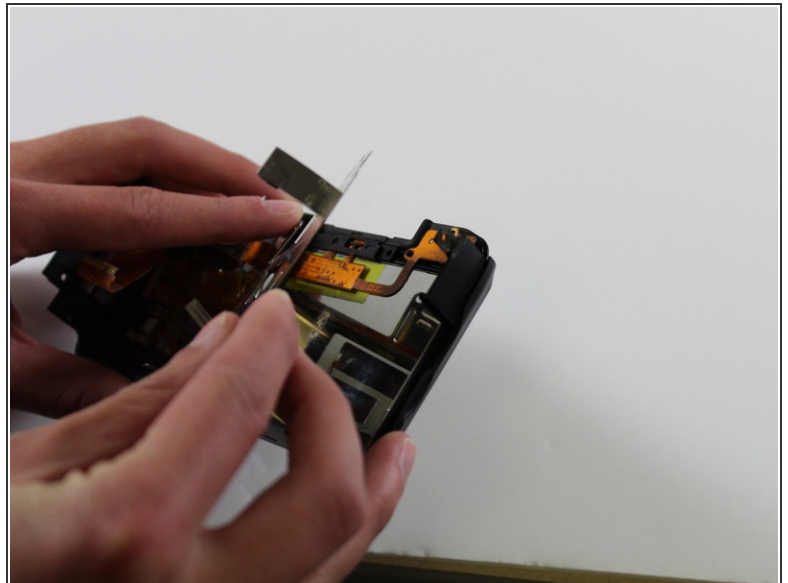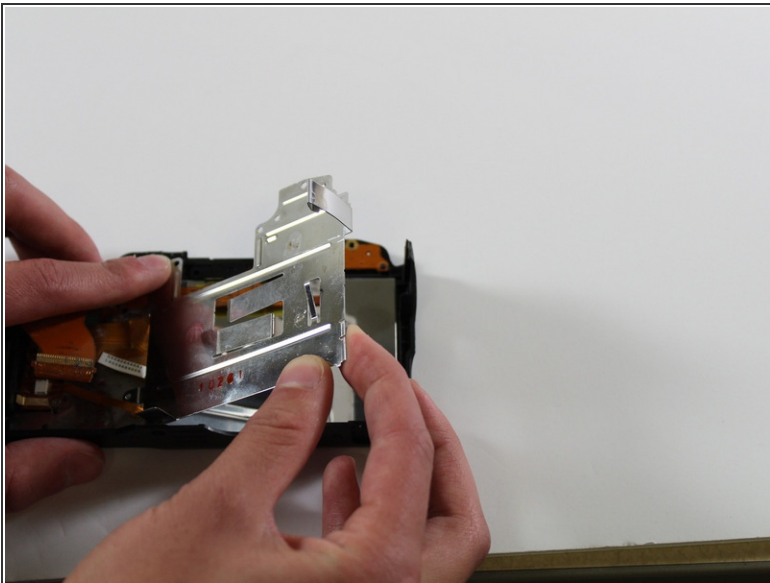


- Remove the metal plate covering inside of the LCD screen

Step 11

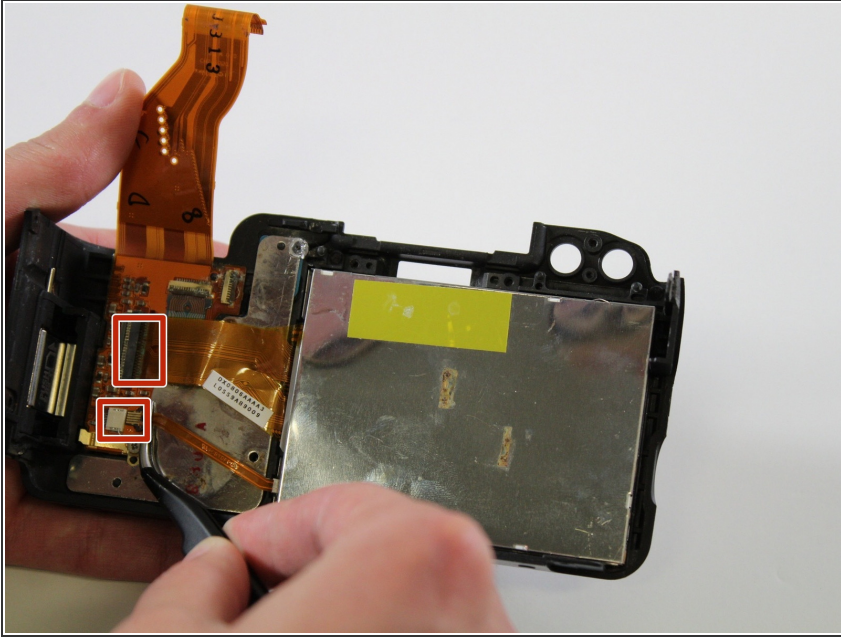

- Carefully disconnect the circuitry sheets from the white plastic bases

Step 12

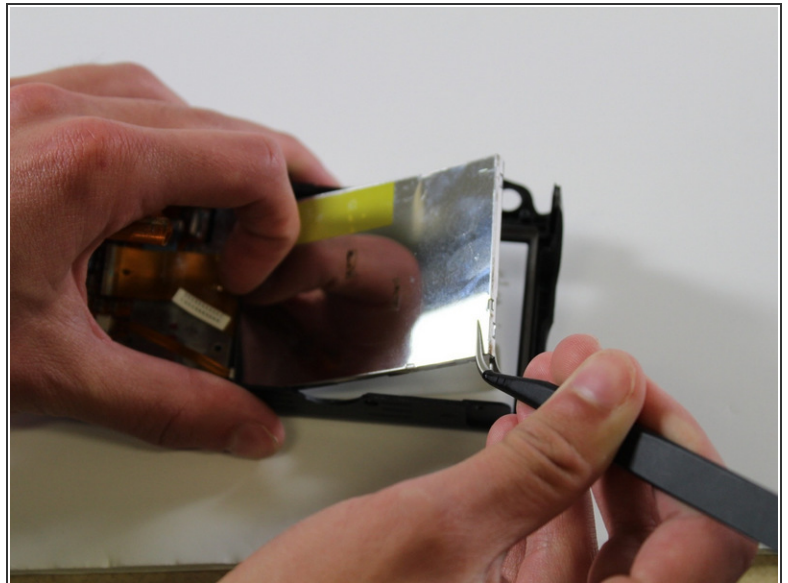

- Using the plastic spudger, carefully pry out the LCD screen from the back panel

To reassemble your device, follow these instructions in reverse order.

